

Архангельск (8182)63-90-72  
Астана (7172)727-132  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89  
Иваново (4932)77-34-06

Ижевск (3412)26-03-58  
Иркутск (395)279-98-46  
Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Липецк (4742)52-20-81  
Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81  
Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16  
Россия (495)268-04-70


Пермь (342)205-81-47  
Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13  
Казахстан (772)734-952-31

Сургут (3462)77-98-35  
Тверь (4822)63-31-35  
Томск (3822)98-41-53  
Тула (4872)74-02-29  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Ярославль (4852)69-52-93

[www.gneuss.nt-rt.ru](http://www.gneuss.nt-rt.ru) || [gsk@nt-rt.ru](mailto:gsk@nt-rt.ru)



## Технические характеристики на преобразователи давления с нагреваемым наконечником серии DAIP

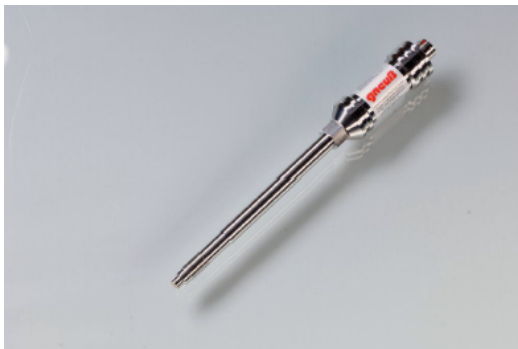

### Contents:

1. Introduction
2. Operating range and field of application
3. Danger areas
4. Waste disposal
5. Transport and storage
6. Cleaning of the sensors
7. Installing / Uninstalling
8. Connecting and commissioning of the DAI
9. Sensor heating
10. Technical data
11. Dimensions

### 1. Introduction

Melt pressure transducers are precise measuring probes which obtain their measuring accuracy and long life span only if they are properly handled. These operating instructions should be studied carefully before installing the sensor, thus ensuring a trouble-free operation. Nevertheless, should you encounter any difficulties, please feel free to contact our service technicians, who will be pleased to be of assistance.

### 2. Operating range and field of application:

Gneuss melt pressure transducers have exclusively been designed for the pressure monitoring of liquid, doughy or pasty materials at high temperatures. These must have a homogeneous constitution. The application area has to be selected in such a manner, that a max. Differential pressure of 2% of the measuring range – based on the diaphragm surface- is not exceeded. Any use beyond the above mentioned application area does not conform to regulations

### 3. Danger areas:

In the complete application area of the melt pressure transducer, there is a risk of combustion. If the pressure transducer is not installed or uninstalled correctly during the applying of pressure there is a risk of hot media emerging.

### 4. Waste disposal:

Pressure transducers filled with mercury, have to be disposed of as hazardous waste. A free of charge and ecologically-friendly disposal can be carried out by Gneuss Kunststofftechnik GmbH

### 5. Transport and storage:

Gneuss pressure transducers are generally dispatched in separate packages. In case of mechanical exposure, the sensing diaphragm is protected by an aluminium cap. This cap should be screwed on at all times of storage.

### 6. Cleaning of the sensors

In order to clean the diaphragm, the sealing surface and the process thread the sensor must have the same temperature as the plastic melting point. The diaphragm and the sealing surface can be wiped down with a soft cloth, the thread can be cleaned with a steel brush.

**(Do not come into contact with the diaphragm surface)**

### 7. Installing / Uninstalling

#### Installing

On installation of the pressure transducer it is imperative to note, that the sensor bore corresponds to the dimensions mentioned below. The fitting accuracy can be checked by means of a test bolt. Prior to mounting the sensor, the thread should be covered with a heat resistant paste. Should the machinery with the sensor drilling still be at production temperature, a certain preheating period for the sensor should be taken into consideration, in order to avoid a seizing of the sensor due to thermal expansion.

On mounting the transducer, it is important to note that the sensor is not screwed in at an angle and that the sensor does not fall into the bore. It is of vital importance that the force for installing the sensor must only be applied at the shaft (hexagon). Do not apply any force to the sensor head!


**Starting torque for 1/2-20 UNF = max. 30 Nm**

**Starting torque for M 18 x 1,5 = max. 50 Nm**

#### Uninstalling

The uninstalling of the pressure transducer has to be done in a heated up condition (plastic melting point)

On removal of the sensor, please take note that the diaphragm is not brought into contact. It is of vital importance that the force for installing the sensor must only be applied at the shaft (hexagon). Do not apply any force to the sensor head!

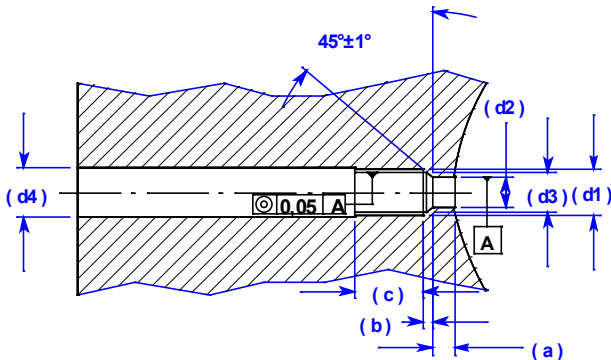

d1	M18x1,5	1/2"20UNF 2A
d2	Ø 10,1 <sup>+0,05</sup>	Ø 7,9 <sup>+0,05</sup>
d3	Ø 16,1 <sup>+0,1</sup>	Ø 10,7 <sup>+0,1</sup>
d4	Ø 20 <sup>+0,2</sup>	Ø 13 <sup>+0,2</sup>
a	6,1 <sup>-0,1</sup>	5,7 <sup>-0,1</sup>
b	4 <sup>-0,2</sup>	3,2 <sup>-0,2</sup>
c	25	19


### 8. Connections and commissioning

After the pressure transducer has been installed into the line, as described in section 7, the electrical connections have to be applied according to the connections indicated in section 8. Gneuss pressure transducers are equipped with high quality and robust plug connections. The connecting wire should be soldered with great care as transmission errors of signals can otherwise occur. We recommend using Gneuss prefabricated connecting wires which are available ex- stock.

Pressure sensors of the type DAI are fitted with an integrated pressure amplifier, which depending on version can offer a standard signal in accordance to the pressure range. On commissioning, the sensor must be calibrated to the corresponding evaluation unit. **The calibration process must be carried out when the line is heated and at zero pressure.** Please proceed as described below.

After installation and sufficient warming-up period of the pressure sensor a zero- adjustment of the sensor has to be performed by activating the **AUTO ZERO** function.

The **AUTO ZERO** function is initiated by a short connection of the corresponding wires (see wiring configuration). For the DAI version with optical **AUTO ZERO** initiation (DAI-...-6PA) the zero point calibration can be initiated directly at the sensor. For this, remove the screw plug near the connecting plug and direct the beam of an LED flashlight into this opening for approx. 3-5 seconds.

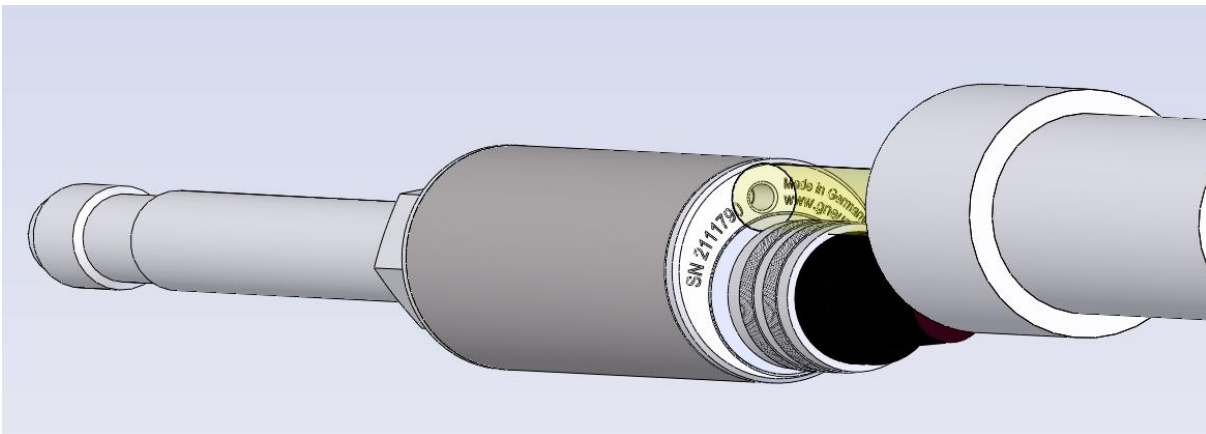



Insert the screw plug again afterwards; it simply serves for protection against contamination and extraneous light. The protection class is not impaired even without the screw plug being fitted. The integrated amplifier will thereafter transmit the starting value of its output scale (0V at 0...10V, 0mA at 0...20mA and 4mA at 4...20mA output signal). Function is suppressed, if the output signal is more than 5% of the maximum value.

Afterwards an 80% inspection of the output signal can be performed. All corresponding lead wires need to be connected for this procedure (see wiring diagram). The pressure sensor will now supply a signal which is according to 80% of the measuring value.

Electrical wiring configuration **2-Wire sensor**

Connector type: **PT02A-10-6P.**

4...20mA

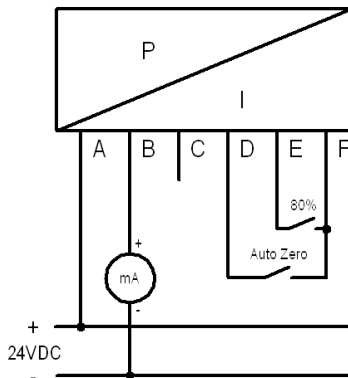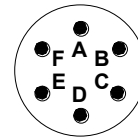



Pin	Function	Colour coding (Gneuß – cable)
A	Supply / Signal +	yellow
B	Supply / Signal -	white
C	free	brown
D	Auto Zero	green
E	80%	pink
F	Auto Zero / 80%	grey

Pin D and Pin F are utilised for the activation of the Auto-Zero function. The Zero-point is hereby merely shifted. The signal amplification is not affected, as it is shifted linear to the zero point. In order to generate the 80% signal, pins E and F must be connected

Electrical wiring configuration **3-Wire Sensor**

Connector type **PT02A-10-6P.**

0...10V  
0/4...20mA

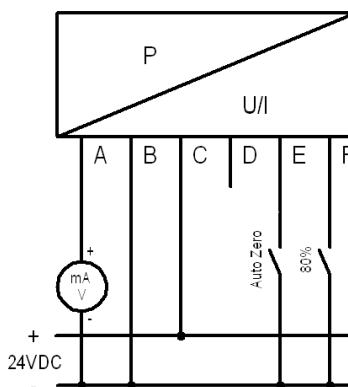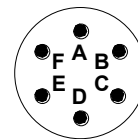



Pin	Function	Colour coding (Gneuß – cable)
A	Signal +	yellow
B	Supply /Signal/Auto Zero -	white
C	Supply +	brown
D	free	green
E	Auto Zero	pink
F	80%	grey

In order for the Auto-Zero function to be activated, pins E and B have to be connected with each other. Only the Zero-point is shifted. The signal amplification remains untouched, as it shifts linear to the zero-point. In order to generate the 80% signal, pins F and B must be connected.

Electrical wiring configuration **4-Wire Sensor**

Connector type **PT02A-10-6P.**

0...10V  
0/4...20mA

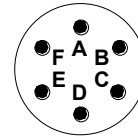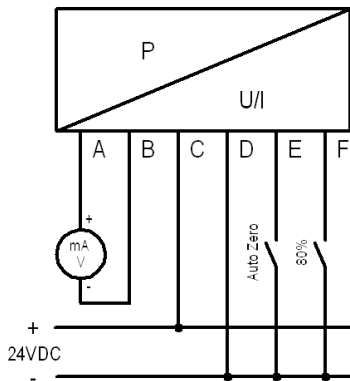

Pin	Function	Colour coding (Gneuß – cable)
A	Signal +	yellow
B	Signal/Auto Zero - *	white
C	Supply +	brown
D	Supply / Auto Zero - *	green
E	Auto Zero	pink
F	80%	grey



\* Pins B and D are connected internally

In order to activate the Auto-Zero function, pins A, C and D must be connected. Only the Zero point is shifted. The signal amplification remains in place, as it shifts linear to the zero point. In order to generate the 80% signal, pins F, C and D must be connected.

Electrical wiring configuration **4-Wire Sensor Version 98**

Connector type **PT02A-98-P.**

0...10V  
0/4...20mA

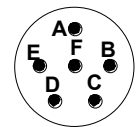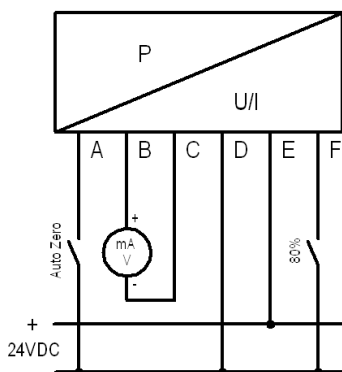

Pin	Function	Colour coding (Gneuß – cable)
A	Auto Zero	pink
B	Signal +	yellow
C	Signal/Auto Zero - *	white
D	Speisung/Auto Zero - *	green
E	Speisung +	brown
F	80%	grey

\* Pins C and D are connected internally

In order to activate the Auto-Zero function, pins A, C and D have to be connected. This leads to a shifting of the zero point. The signal amplification remains in place, as it shifts linear to the zero point.

The 80% signal is generated by connecting pins F,C and D

**Thermo couple connection:**


PCA.0S.302.CLL



Thermocouple

**Heater connection:**

PCA.3S.302.CLL

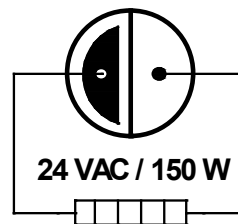

Sensor heating

## 9. Sensor Heating

The pressure transducer DAIPremium is a high-efficient sensor with integrated thermocouple and integrated heating element. During the production process, the thermocouple can be used as control measurement at any time. The integrated heating serves to protect the sensor from damage to the membrane when processing problematic plastic melts, e.g. polycarbonate, since these contract very much when cooling down. In the production process, it is sufficient to set the nominal value of the temperature control approx. 30-50°C below the melt temperature. By switching on the heating, the front part of the sensor incl. membrane can be adjusted to such a temperature that the melt in the membrane area remains viscous. Further, the heating can be used to help to remove the sensor out of a "cold" machine. For this, it is normally sufficient to heat up the sensor for approx. 15 to 30 minutes (depending on the temperature).

Attention:

The sensor heating must always be controlled by the integrated thermocouple. The sensor should only be heated up when being installed, otherwise the heating element might be damaged. During the heating process, the temperature level in the whole sensor and drilling area can be very high.


After having installed the pressure transducer in the line as described under point 7, the electrical connection has to be carried out according to the connections indicated section 8.



### 10. Technical Data:

Pressure range:	See order specification
Supply :	19...32 VDC
Outputsignal:	0...10 V; 0...20 mA; 4...20 mA (see order specification)
Temperature element:	Type J; K; L, PT 100 (see order specification)
Heater :	24 V 150 W
Calibration point:	80 % of measuring range
Accuracy: specification)	$\leq \pm 0,50$ % FSO respectively $\leq \pm 0,25$ % FSO (see order specification)
Maximum over load:	150 % of measuring range
Zero deviation with Temperature Variations at the membrane::	$\leq \pm 0,003$ % from final value/°C
Zero deviation with Temperature Variations at the measuring head:	$\leq \pm 0,003$ % from final value/°C
Maximum temperature at the membrane:	300°C with NTX-filling (W) 400°C with Hg-filling (M) 500°C with NaK-filling (N)
Maximum. Temperature at The measuring head:	85 °C
EMC: according to	Electromagnetic disturbances and electromagnetic susceptibility EN 61326
Degree of protection:	IP 55

### 11. Dimensions

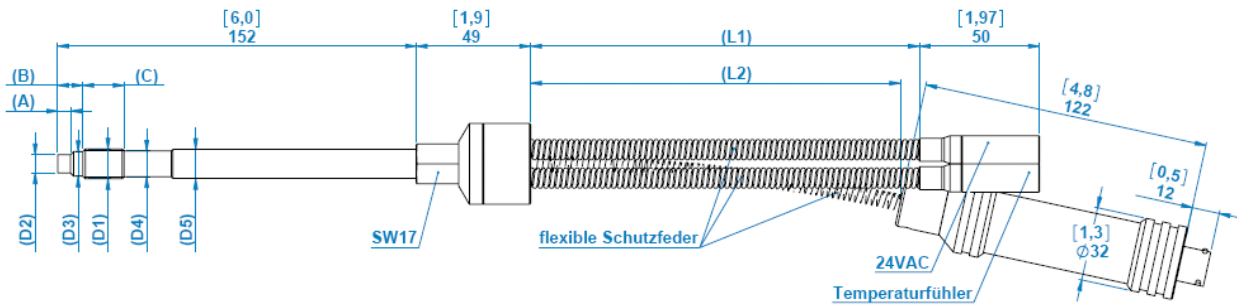

For available variations see order specification

**Order specification DAIP series  
Pressure Transducer Premium with V or mA output  
with temperature measurement, heated**

Order specification	DAIP																
<b>Standard configuration</b>	DAIP																
<input type="checkbox"/> Total measurement error FSO																	
<input type="checkbox"/> 0,25%	*	1															
<input type="checkbox"/> 0,50%		2															
<b>Output signal</b>																	
<input type="checkbox"/> 4-20 mA (2-wire)		E 2															
<input type="checkbox"/> 4-20 mA (3-wire)		E 3															
<input type="checkbox"/> 4-20 mA (4-wire)		E 4															
<input type="checkbox"/> 0-20 mA (3-wire)		D 3															
<input type="checkbox"/> 0-20 mA (4-wire)		D 4															
<input type="checkbox"/> 0-10 V (3-wire)		C 3															
<input type="checkbox"/> 0-10 V (4-wire)		C 4															
<b>Thermocouple</b>																	
<input type="checkbox"/> Thermocouple type J			T H J														
<input type="checkbox"/> Thermocouple type L			T H L														
<input type="checkbox"/> Thermocouple type K			T H K														
<input type="checkbox"/> Meas. resistance PT-100 (2-wire)			P T 2														
<input type="checkbox"/> Meas. resistance PT-100 (3-wire)			P T 3														
<input type="checkbox"/> Meas. resistance PT-100 (4-wire)			P T 4														
<b>Thread connection</b>																	
<input type="checkbox"/> 1/2" UNF 2A						1 2 A											
<input type="checkbox"/> M18 x 1,5 A						1 8 A											
<input type="checkbox"/> M18 x 1,5 B						1 8 B											
<b>Pressure range [bar]</b>																	
<input type="checkbox"/> 100							B 1 0 Z										
<input type="checkbox"/> 200							B 2 0 Z										
<input type="checkbox"/> 350							B 3 5 Z										
<input type="checkbox"/> 400							B 4 0 Z										
<input type="checkbox"/> 500							B 5 0 Z										
<input type="checkbox"/> 600							B 6 0 Z										
<input type="checkbox"/> 700							B 7 0 Z										
<input type="checkbox"/> 800							B 8 0 Z										
<input type="checkbox"/> 1000							B 1 0 H										
<input type="checkbox"/> 1400							B 1 4 H										
<input type="checkbox"/> 2000							B 2 0 H										
<b>Shaft length (rigid)</b>																	
<input type="checkbox"/> 152 mm, 6" (standard)								S 0									
<input type="checkbox"/> Special shaft length								S 9									
<b>Length of flexible capillary</b>																	
<input type="checkbox"/> 457 mm, 18" (standard)										F 5							
<input type="checkbox"/> 610 mm, 24"										F 6							
<input type="checkbox"/> 760 mm, 30"										F 8							
<input type="checkbox"/> Special length										F 9							
<b>Diaphragm</b>																	
<input type="checkbox"/> Stainless steel	*2										R						
<input type="checkbox"/> Alloy C4	*2										H						
<input type="checkbox"/> Alloy 718	*2										I						
<input type="checkbox"/> Stainless steel/GX-Coating											B						
<input type="checkbox"/> Alloy C4/GX-Coating											C						
<input type="checkbox"/> Alloy 718/GX-Coating											D						
<input type="checkbox"/> Special diaphragm											S						
<b>Sensor medium</b>																	
<input type="checkbox"/> Mercury-free												W					
<input type="checkbox"/> Mercury-free high temperature	*5											N					
<input type="checkbox"/> Mercury												M					
<b>Electrical connection</b>																	
<input type="checkbox"/> 6-pole connection (standard)	*8												6 P				
<input type="checkbox"/> 8-pole connection													8 P				
<input type="checkbox"/> 6-pole connection (type 98)	*6												9 8				
<input type="checkbox"/> optical Auto-Zero activation													A				
<input type="checkbox"/> Cable ext stainless steel, 3m	*3													3 3			
<b>Special design</b>																	
<input type="checkbox"/> No special design																0 0 0	
<input type="checkbox"/> Special design																X X X	

- \*1 Only available ≥ 100 bar
- \*2 As a standard, all diaphragms are coated with Gneuss unique "G-coating" against adhesive and glutinous media. Special coatings are available on request.
- \*3 For cable ext, please confirm cable length. Unless specified, the standard length will be 3 m.
- \*5 Mercury-free High Temperature ≥ 300° (only available for 0-100 bar up to 0-800bar)
- \*6 available with optical auto-zero

Order specification DAIP series  
 Pressure Transducer Premium with V or mA output  
 with temperature measurement, heated

Order specification		DAIP	-	1	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-
Standard configuration		DAIP																			
Total measurement error FSO	0,25%			1																	
Output signal																					
4-20 mA (2-wire)				E 2																	
4-20 mA (3-wire)				E 3																	
4-20 mA (4-wire)				E 4																	
0-20 mA (3-wire)				D 3																	
0-20 mA (4-wire)				D 4																	
0-10 V (3-wire)				C 3																	
0-10 V (4-wire)				C 4																	
Thermocouple																					
Thermocouple type J						T H J															
Thermocouple type L						T H L															
Thermocouple type K						T H K															
Meas. resistance PT-100 (2-wire)						P T 2															
Meas. resistance PT-100 (3-wire)						P T 3															
Meas. resistance PT-100 (4-wire)						P T 4															
Thread connection																					
1/2" UNF 2A								1 2	A												
M18 x 1,5 A								1 8	A												
M18 x 1,5 B								1 8	B												
Pressure range [psi]																					
1500								P 1 5	H												
3000								P 3 0	H												
5000								P 5 0	H												
6000								P 6 0	H												
7500								P 7 5	H												
9000								P 9 0	H												
10000								P 1 0	T												
12000								P 1 2	T												
15000								P 1 5	T												
20000								P 2 0	T												
30000								P 3 0	T												
Shaft length (rigid)																					
152 mm, 6" (standard)										S 0											
Special shaft length										S 9											
Length of flexible capillary																					
457 mm, 18" (standard)										F 5											
610 mm, 24"										F 6											
760 mm, 30"										F 8											
Special length										F 9											
Diaphragm																					
Alloy 718	**													I							
Special diaphragm														S							
Sensor medium																					
Mercury-free																				W	
Mercury-free High Temperature	****																			N	
Mercury																				M	
Electrical connection																					
6-pole connection (standard)																					6 P
6-pole connection with opt. auto-zero																					6 P A
8-pole connection																					8 P
6-pole connection (type 98)																					9 8
Cable exit stainless steel, 3m																					3 3
Special design																					
No special design																					0 0 0
Special design																					X X X

- \*\* As a standard, all diaphragms are coated against adhesive and glutinous media.  
Special coatings are available on request.
- \*\*\* For cable exit, please confirm cable length. Unless specified, the standard length will be 3 m.
- \*\*\*\* Mercury-free High Temperature ≥ 300°

**Архангельск** (8182)63-90-72  
**Астана** (7172)727-132  
**Астрахань** (8512)99-46-04  
**Барнаул** (3852)73-04-60  
**Белгород** (4722)40-23-64  
**Брянск** (4832)59-03-52  
**Владивосток** (423)249-28-31  
**Волгоград** (844)278-03-48  
**Вологда** (8172)26-41-59  
**Воронеж** (473)204-51-73  
**Екатеринбург** (343)384-55-89  
**Иваново** (4932)77-34-06

**Ижевск** (3412)26-03-58  
**Иркутск** (395)279-98-46  
**Казань** (843)206-01-48  
**Калининград** (4012)72-03-81  
**Калуга** (4842)92-23-67  
**Кемерово** (3842)65-04-62  
**Киров** (8332)68-02-04  
**Краснодар** (861)203-40-90  
**Красноярск** (391)204-63-61  
**Курск** (4712)77-13-04  
**Липецк** (4742)52-20-81

**Киргизия** (996)312-96-26-47

**Магнитогорск** (3519)55-03-13  
**Москва** (495)268-04-70  
**Мурманск** (8152)59-64-93  
**Набережные Челны** (8552)20-53-41  
**Нижний Новгород** (831)429-08-12  
**Новокузнецк** (3843)20-46-81  
**Новосибирск** (383)227-86-73  
**Омск** (3812)21-46-40  
**Орел** (4862)44-53-42  
**Оренбург** (3532)37-68-04  
**Пенза** (8412)22-31-16

**Россия** (495)268-04-70

**Пермь** (342)205-81-47  
**Ростов-на-Дону** (863)308-18-15  
**Рязань** (4912)46-61-64  
**Самара** (846)206-03-16  
**Санкт-Петербург** (812)309-46-40  
**Саратов** (845)249-38-78  
**Севастополь** (8692)22-31-93  
**Симферополь** (3652)67-13-56  
**Смоленск** (4812)29-41-54  
**Сочи** (862)225-72-31  
**Ставрополь** (8652)20-65-13

**Казахстан** (772)734-952-31

**Сургут** (3462)77-98-35  
**Тверь** (4822)63-31-35  
**Томск** (3822)98-41-53  
**Тула** (4872)74-02-29  
**Тюмень** (3452)66-21-18  
**Ульяновск** (8422)24-23-59  
**Уфа** (347)229-48-12  
**Хабаровск** (4212)92-98-04  
**Челябинск** (351)202-03-61  
**Череповец** (8202)49-02-64  
**Ярославль** (4852)69-52-93

[www.gneuss.nt-rt.ru](http://www.gneuss.nt-rt.ru) || [gsk@nt-rt.ru](mailto:gsk@nt-rt.ru)