

Архангельск (8182)63-90-72  
Астана (7172)727-132  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89  
Иваново (4932)77-34-06

Ижевск (3412)26-03-58  
Иркутск (395)279-98-46  
Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Липецк (4742)52-20-81  
Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81  
Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16  
Россия (495)268-04-70

Пермь (342)205-81-47  
Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13  
Казахстан (772)734-952-31

Сургут (3462)77-98-35  
Тверь (4822)63-31-35  
Томск (3822)98-41-53  
Тула (4872)74-02-29  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Ярославль (4852)69-52-93

[www.gneuss.nt-rt.ru](http://www.gneuss.nt-rt.ru) || [gsk@nt-rt.ru](mailto:gsk@nt-rt.ru)



# Технические характеристики на измерительные преобразователи давления с нормированным выходным сигналом и встроенным датчиком температуры серии ДТА



## Contents:

1. Introduction
2. Operating range and field of application
3. Danger areas
4. Waste disposal
5. Transport and storage
6. Cleaning of the sensors
7. Installing / Uninstalling
8. Connecting and commissioning
9. Technical Data
10. Dimensions

## 1. Introduction

Melt pressure transducers are precise measuring probes which obtain their measuring accuracy and long life span only if they are properly handled. These operating instructions should be studied carefully before installing the sensor, thus ensuring a trouble-free operation. Nevertheless, should you encounter any difficulties, please feel free to contact us or our representatives - we will be pleased to be of assistance.

These operating instructions are meant to give general information on all types of Gneuss pressure sensors (see points 1 to 8). As from point 9, specific information on the individual sensor type is given.

## 2. Operating range and field of application:

Gneuss melt pressure transducers have exclusively been designed for the pressure monitoring of liquid, doughy or pasty materials at high temperatures. These must have a homogeneous constitution. The application area has to be selected in such a manner, that a max. differential pressure of 2 % of the measuring range – based on the diaphragm surface - is not exceeded. Any use beyond the above mentioned application area does not conform to regulations.

## 3. Danger areas:

In the complete application area of the melt pressure transducer, there is a risk of combustion. If the pressure transducer is not installed or uninstalled correctly during the applying of pressure there is a risk of hot media emerging.

## 4. Waste disposal:

Pressure transducers filled with mercury, have to be disposed of as hazardous waste. A free of charge and ecologically-friendly disposal can be carried out by Gneuss Kunststofftechnik GmbH.

## 5. Transport and storage:

Gneuss pressure transducers are generally dispatched in separate packages. In case of mechanical exposure, the sensing diaphragm is protected by an aluminium cap. This cap should be screwed on at all times of storage.

## 6. Cleaning of the sensors

In order to clean the diaphragm, the sealing surface and the process thread, the sensor must have the same temperature as the plastic melting point. The diaphragm and the sealing surface can be wiped down with a soft cloth, the thread can be cleaned with a steel brush.

**(Do not come into contact with the diaphragm surface)**

## 7. Installing / Uninstalling

### Installing

On installation of the pressure transducer it is imperative to note that the sensor bore corresponds to the dimensions mentioned below. The fitting accuracy can be checked by means of a test bolt. Prior to mounting the sensor, the thread should be covered with a heat resistant paste. Should the machinery with the sensor drilling still be at production temperature, a certain preheating period for the sensor should be taken into consideration, in order to avoid a seizing of the sensor due to thermal expansion.

On mounting the transducer, it is important to note that the sensor is not screwed in at an angle and that the sensor does not fall into the bore. It is of vital importance that the force for installing the sensor must only be applied at the shaft (hexagon). Do not apply any force to the sensor head!


**Starting torque for 1/2-20 UNF = max. 30 Nm**

**Starting torque for M 18 x 1,5 = max. 50 Nm**

### Uninstalling

The uninstalling of the pressure transducer has to be done in a heated up condition (plastic melting point)

On removal of the sensor, please take note that the diaphragm is not brought into contact. It is of vital importance that the force for uninstalling the sensor must only be applied at the shaft (hexagon). Do not apply any force to the sensor head!

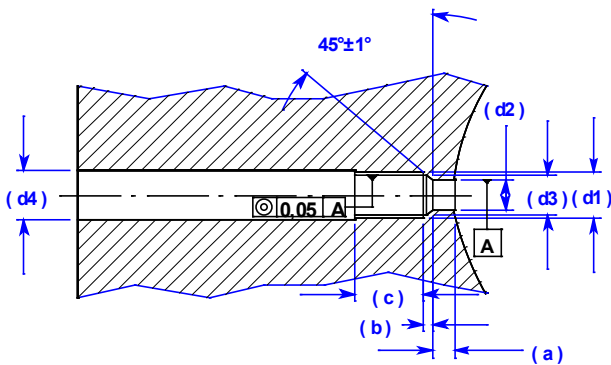

d1	M18x1,5	1/2"20UNF 2A
d2	Ø 10,1 <sup>+0,05</sup>	Ø 7,9 <sup>+0,05</sup>
d3	Ø 16,1 <sup>+0,1</sup>	Ø 10,7 <sup>+0,1</sup>
d4	Ø 20 <sup>+0,2</sup>	Ø 13 <sup>+0,2</sup>
a	6,1 <sup>-0,1</sup>	5,7 <sup>-0,1</sup>
b	4 <sup>-0,2</sup>	3,2 <sup>-0,2</sup>
c	25	19

## 8. Connections and commissioning


After the pressure transducer has been mounted into the line as is described in section 7, the electrical connection then has to be carried out according to the connections indicated on the next page. Gneuss pressure transducers are equipped with high-quality and robust plug connections. The connecting wire should be soldered with great care since otherwise, transmission errors of signals can be caused. We recommend to use Gneuss prefabricated connecting wires which are available from stock.

For commissioning, the sensor and the corresponding evaluation unit (e.g. Gneuss pressure measurement amplifier) have to be calibrated accordingly. **The calibrating process has to be carried out when the line is heated up and at zero pressure.** Please take the details concerning the way how to proceed from the respective operating instructions for the evaluation unit.

### Electrical wiring


Plug type in sensor **PT 02A-10-6P**

Plug type socket **PT 06W-10-6S**

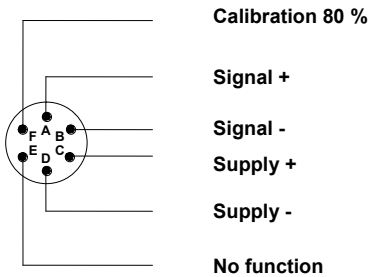

Pin	Function	Colour scheme (Gneuß – cables)
A	Signal +	Yellow
B	Signal -	White
C	Supply +	Brown
D	Supply -	Green
E	No function	Pink
F	Calibration 80%	Grey


Plug type in sensor **8P PC06A-12-8P**

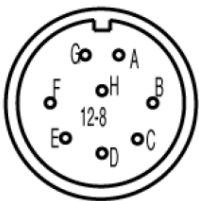

Pin	Function	Colour scheme (Gneuß – cables)
A	Supply +	Yellow
B	Signal +	White
C	Supply -	Brown
D	Signal -	Green
E	Calibration 80%	Pink
F	Calibration 80%	Grey
G	free	---
H	free	---

## 9. Technical Data:

Pressure range:	See order specification
Supply:	6...10V maximum current consumption 28,6 mA @ 10V
Output signal:	2mV/V or 3,3 mV/V (see order specification)
Bridge resistance:	350 $\Omega$
Calibration point:	80 % of measuring range
Accuracy: specification)	$\leq \pm 0,50$ % FSO respectively $\leq \pm 0,25$ % FSO (see order specification)
Maximum over load:	150 % of measuring range
Zero deviation with temperature variations at the membrane:	$\leq \pm 0,003$ % from final value/ $^{\circ}\text{C}$
Zero deviation with temperature variations at the measuring head:	$\leq \pm 0,003$ % from final value/ $^{\circ}\text{C}$
Maximum temperature at the membrane:	300 $^{\circ}\text{C}$ with NTX-filling (W) 400 $^{\circ}\text{C}$ with Hg-filling (M) 500 $^{\circ}\text{C}$ with NaK-filling (N)
Maximum. temperature at the measuring head:	125 $^{\circ}\text{C}$
EMC: according to	Electromagnetic disturbances and electromagnetic susceptibility  EN 61326
Degree of protection:	IP 55

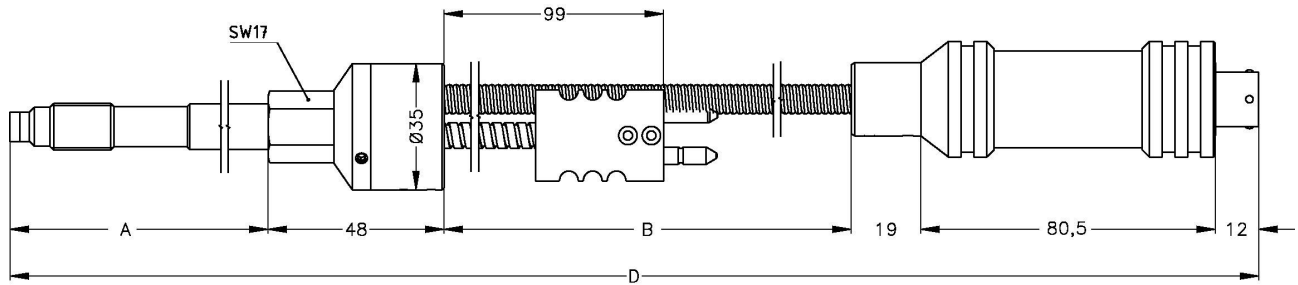**10. Dimensions**

For available variations see order specification

## Order specification DTA series

### Pressure Transducer with mV/V output and temperature measurement

Order specification	DTA																				
Standard configuration																					
<input type="checkbox"/>	DTA																				
Total measurement error F80																					
<input type="checkbox"/>	0,25%	*1	1																		
<input type="checkbox"/>	0,60%		2																		
Output signal																					
<input type="checkbox"/>	2,0 mV/V		0 0																		
<input type="checkbox"/>	2,6 mV/V		0 6																		
<input type="checkbox"/>	3,3 mV/V		6 0																		
Thermocouple																					
<input type="checkbox"/>	Thermocouple type J		T H J																		
<input type="checkbox"/>	Thermocouple type L		T H L																		
<input type="checkbox"/>	Thermocouple type K		T H K																		
<input type="checkbox"/>	Meas. resistance PT-100 (2-wire)		P T 2																		
<input type="checkbox"/>	Meas. resistance PT-100 (3-wire)		P T 3																		
<input type="checkbox"/>	Meas. resistance PT-100 (4-wire)		P T 4																		
Thread connection																					
<input type="checkbox"/>	1/2" UNF 2A																				
<input type="checkbox"/>	M18 x 1,5 A																				
<input type="checkbox"/>	M18 x 1,5 B																				
Pressure range [bar]																					
<input type="checkbox"/>	60																				
<input type="checkbox"/>	100																				
<input type="checkbox"/>	200																				
<input type="checkbox"/>	360																				
<input type="checkbox"/>	400																				
<input type="checkbox"/>	600																				
<input type="checkbox"/>	800																				
<input type="checkbox"/>	700																				
<input type="checkbox"/>	800																				
<input type="checkbox"/>	1000																				
<input type="checkbox"/>	1400																				
<input type="checkbox"/>	2000																				
Shaft length (rigid)																					
<input type="checkbox"/>	162 mm, 6" (standard)																				
<input type="checkbox"/>	203 mm, 8,0"																				
<input type="checkbox"/>	254 mm, 10,0"																				
<input type="checkbox"/>	318 mm, 12,5"																				
<input type="checkbox"/>	356 mm, 14,0"																				
<input type="checkbox"/>	457 mm, 18,0"																				
<input type="checkbox"/>	76 mm, 3,0"																				
<input type="checkbox"/>	Special shaft length																				
Length of flexible pressure capillary																					
<input type="checkbox"/>	457 mm, 18" (standard)																				
<input type="checkbox"/>	610 mm, 24"																				
<input type="checkbox"/>	760 mm, 30"																				
<input type="checkbox"/>	Special length																				
Diaphragm																					
<input type="checkbox"/>	Stainless steel	*2																			
<input type="checkbox"/>	Alloy C4	*2																			
<input type="checkbox"/>	Alloy 718	*2																			
<input type="checkbox"/>	Stainless steel/GX-Coating																				
<input type="checkbox"/>	Alloy C4/GX-Coating																				
<input type="checkbox"/>	Alloy 718/GX-Coating																				
<input type="checkbox"/>	Special diaphragm																				
Sensor medium																					
<input type="checkbox"/>	Mercury-free																				
<input type="checkbox"/>	Mercury-free high temperature	*5																			
<input type="checkbox"/>	Mercury																				
Electrical connection																					
<input type="checkbox"/>	8-pole connection (standard)																				
<input type="checkbox"/>	8-pole connection																				
<input type="checkbox"/>	Cable exit stainless steel, 3m	*3																			
Special design																					
<input type="checkbox"/>	No special design																				
<input type="checkbox"/>	Special design																				

\*1 Only available ≥ 100 bar

\*2 As a standard, all diaphragms are coated with Gneuss unique "G-coating" against adhesive and glutinous media. Special coatings are available on request.

\*3 For cable exit, please confirm cable length. Unless specified, the standard length will be 3 m.

\*5 Mercury-free High Temperature ≥ 300° (only available for 0-100 bar up to 0-800bar)





Архангельск (8182)63-90-72  
Астана (7172)727-132  
Астрахань (8512)99-46-04  
Барнаул (3852)73-04-60  
Белгород (4722)40-23-64  
Брянск (4832)59-03-52  
Владивосток (423)249-28-31  
Волгоград (844)278-03-48  
Вологда (8172)26-41-59  
Воронеж (473)204-51-73  
Екатеринбург (343)384-55-89  
Иваново (4932)77-34-06

Ижевск (3412)26-03-58  
Иркутск (395)279-98-46  
Казань (843)206-01-48  
Калининград (4012)72-03-81  
Калуга (4842)92-23-67  
Кемерово (3842)65-04-62  
Киров (8332)68-02-04  
Краснодар (861)203-40-90  
Красноярск (391)204-63-61  
Курск (4712)77-13-04  
Липецк (4742)52-20-81  
Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13  
Москва (495)268-04-70  
Мурманск (8152)59-64-93  
Набережные Челны (8552)20-53-41  
Нижний Новгород (831)429-08-12  
Новокузнецк (3843)20-46-81  
Новосибирск (383)227-86-73  
Омск (3812)21-46-40  
Орел (4862)44-53-42  
Оренбург (3532)37-68-04  
Пенза (8412)22-31-16  
Россия (495)268-04-70

Пермь (342)205-81-47  
Ростов-на-Дону (863)308-18-15  
Рязань (4912)46-61-64  
Самара (846)206-03-16  
Санкт-Петербург (812)309-46-40  
Саратов (845)249-38-78  
Севастополь (8692)22-31-93  
Симферополь (3652)67-13-56  
Смоленск (4812)29-41-54  
Сочи (862)225-72-31  
Ставрополь (8652)20-65-13  
Казахстан (772)734-952-31

Сургут (3462)77-98-35  
Тверь (4822)63-31-35  
Томск (3822)98-41-53  
Тула (4872)74-02-29  
Тюмень (3452)66-21-18  
Ульяновск (8422)24-23-59  
Уфа (347)229-48-12  
Хабаровск (4212)92-98-04  
Челябинск (351)202-03-61  
Череповец (8202)49-02-64  
Ярославль (4852)69-52-93

[www.gneuss.nt-rt.ru](http://www.gneuss.nt-rt.ru) || [gsk@nt-rt.ru](mailto:gsk@nt-rt.ru)