

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Россия (495)268-04-70

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Казахстан (772)734-952-31

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

www.gneuss.nt-rt.ru || gsk@nt-rt.ru



Технические характеристики на аксессуары и принадлежности



Plug for pressure transducer DAIV2-98

type PT06W-10-98S



Plug for pressure transducer DAIV2-98

type PT06W-10-98S, nickel-plated



Plug connector



Cable plug for the pressure transducer

6-pole, type 0321



Plug for pressure transducer

6-pole, type PT06W-10-6S



Plug for pressure transducer

type EM10S10P



Coupling socket drive load

6-pole



Elbow plug connection

6-pole



Straight plug connection

8-pole



Connector for pressure sensor

7-pin, type 62GB-16J10-07SN



Protection cap, black

ø12,7 mm, length ca. 38 mm



Protection cap, black

ø17,5mm, length ca. 38 mm



Coupling



Mating plug for DAP heating

2-pole



Coupling plug type PCA

4-pole, size 2



Coupling plug type PCA

2-pole, size 2



Coupling plug type PCA

2-pole, size 0



Fixed receptacle for melt temperature
sensor

2-pole, size 2

Fixed receptacle for melt temperature
sensor

size 2



Connecting Plug type FFA 2S 302

2-pole, size 2



Connecting plug type FFA 2S 304

4-pole, size 2



Angel plug

2-pole, size 2

Angle plug

4-pole, size 2



Coupling for thermocouple plug type J

For temperature sensors and DTA/DTAI



Coupling for thermocouple plug type K,
green

For temperature sensors and DTA/DTAI



Connector NiCr-Ni for plug type K, yellow

Coupling for resistor plug PT100, 3-pole

for temperatur sensores and DTA/DTAI



Coupling for resistor plug PT100, 4-pole

for temperature sensors and DTA/DTAI



Coupling for thermocouple plug type L



Insert tool for bush M16 to ½" 20UNF



Insert tool for bush M24 to M18x1,5



Insert tool for insert bushes M18 to 1/2"



Thread cleaning tool for insert bushes M18
x 1,5



Thread cleaning tool for insert bushes 1/2"
20UNF

for shaft length up to 220mm



Thread cleaning tool 1/2" 20 UNF 2A

length 350 mm, for shaft length up to 270mm



Thread cleaning tool M18 x 1,5

for flat sealing inserts



Thread cleaning tool 1/2" 20UNF 2A

length 450 mm, for shaft length up to 370mm



Locking bolt

1/2 inch 20 UNF-2A 85mm



Blanking plug 1/2" 20UNF, 2A

length ca. 170 mm



Blanking plug

M18x1.5 length 160mm



Blanking plug

1/2 inch 20 UNF 2A - 160mm



Blanking plug M18 x 1,5

length ca. 250 mm



Blanking plug M18 x 1.5

length ca. 350 mm



Blanking plug 1/2" 20UNF 2A

length ca. 320 mm, VA



Blanking plug

1/2 inch 20 UNF 2A - 240mm



Blanking plug

1/2 inch 20 UNF 2A - 100mm



Insert bush M18

for 1/2 inch-20UNF Sensors



Insert bush M24

for M18 x 1,5 Sensors



Blanking plug

1/2 inch 20 UNF 2A - 100mm



Insert bush M16

for 1/2 inch-20UNF Sensors

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81

Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16

Россия (495)268-04-70

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13

Казахстан (772)734-952-31

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

www.gneuss.nt-rt.ru || gsk@nt-rt.ru