

**Архангельск** (8182)63-90-72  
**Астана** (7172)727-132  
**Астрахань** (8512)99-46-04  
**Барнаул** (3852)73-04-60  
**Белгород** (4722)40-23-64  
**Брянск** (4832)59-03-52  
**Владивосток** (423)249-28-31  
**Волгоград** (844)278-03-48  
**Вологда** (8172)26-41-59  
**Воронеж** (473)204-51-73  
**Екатеринбург** (343)384-55-89  
**Иваново** (4932)77-34-06

**Ижевск** (3412)26-03-58  
**Иркутск** (395)279-98-46  
**Казань** (843)206-01-48  
**Калининград** (4012)72-03-81  
**Калуга** (4842)92-23-67  
**Кемерово** (3842)65-04-62  
**Киров** (8332)68-02-04  
**Краснодар** (861)203-40-90  
**Красноярск** (391)204-63-61  
**Курск** (4712)77-13-04  
**Липецк** (4742)52-20-81  
**Киргизия** (996)312-96-26-47

**Магнитогорск** (3519)55-03-13  
**Москва** (495)268-04-70  
**Мурманск** (8152)59-64-93  
**Набережные Челны** (8552)20-53-41  
**Нижний Новгород** (831)429-08-12  
**Новокузнецк** (3843)20-46-81  
**Новосибирск** (383)227-86-73  
**Омск** (3812)21-46-40  
**Орел** (4862)44-53-42  
**Оренбург** (3532)37-68-04  
**Пенза** (8412)22-31-16  
**Россия** (495)268-04-70

**Пермь** (342)205-81-47  
**Ростов-на-Дону** (863)308-18-15  
**Рязань** (4912)46-61-64  
**Самара** (846)206-03-16  
**Санкт-Петербург** (812)309-46-40  
**Саратов** (845)249-38-78  
**Севастополь** (8692)22-31-93  
**Симферополь** (3652)67-13-56  
**Смоленск** (4812)29-41-54  
**Сочи** (862)225-72-31  
**Ставрополь** (8652)20-65-13  
**Казахстан** (772)734-952-31

**Сургут** (3462)77-98-35  
**Тверь** (4822)63-31-35  
**Томск** (3822)98-41-53  
**Тула** (4872)74-02-29  
**Тюмень** (3452)66-21-18  
**Ульяновск** (8422)24-23-59  
**Уфа** (347)229-48-12  
**Хабаровск** (4212)92-98-04  
**Челябинск** (351)202-03-61  
**Череповец** (8202)49-02-64  
**Ярославль** (4852)69-52-93

[www.gneuss.nt-rt.ru](http://www.gneuss.nt-rt.ru) || [gsk@nt-rt.ru](mailto:gsk@nt-rt.ru)



## Технические характеристики на соединительные кабели



Connecting cable temperature TS-1-3-PT2

for PT100, 2 conductors



Connecting cable temperature TS-1-3-PT3

for PT100, 3 conductors



Connection cable temperature T-1-3-1J

for single thermocouple FeCuNi type J



Connection cable temperature T-1-3-1J-W

with elbow plug connection



Connection cable temperature T-1-3-1K

for single thermocouple NiCrNi Typ K



Connection cable temperature T-1-3-1K-W

with elbow plug connection



Connection cable temperature T-1-3-1L

for single thermocouple Fe-CuNi, Typ L



Connection cable temperature T-1-3-1L

with elbow plug connection



Connection cable temperature T-1-3-2 J

for double thermocouple FeCuNi



Connection cable temperature T-1-3-2 K

for double thermocouple NiCrNi type K



Connection cable temperature T-1-3-2J-W

with elbow plug connection



Connection cable temperature T-1-3-2K-W

with double thermocouple and elbow plug connection



Connection cable temperature T-1-3-2L

for double thermocouple Fe-CuNi type L



Connection cable temperature T-1-3-PT2

for PT100, 2 conductors



Connection cable temperature T-1-3-PT2

for PT100, 2 conductors or 4-20mA



Connection cable temperature T-1-3-PT3

for PT100, 3 conductors



Connection cable temperature T-1-3-PT3-  
W

for PT100, with elbow plug



Connection cable temperature T-1-3-PT4

for PT100, 4 conductors



Connection cable temperature T-1-3-PT4-  
W

for PT100, with elbow plug



Connection cable temperature T-2-3-1J

for single thermocouple FeCuNi Typ J



Connection cable temperature T-2-3-1J 2 x  
LEMO

for single thermocouple FeCuNi type J



Connection cable temperature T-2-3-1K

for single thermocouple NiCrNi Typ K



Connection cable temperature T-2-3-1L

for single thermocouple FeCuNi Typ L



Connection cable temperature T-2-3-PT4

for PT100, 4-wire



Connection cable temperature TS-1-3-1J

for DTA/DTAI with single thermo. FeCuNi type J



Connection cable temperature TS-1-3-1K

for TF,DTA/DTAI with single thermo. NiCr-Ni type K



Connection cable temperature TS-1-3-1L

for DTA/DTAI with single thermo FeCuNi type L



Connection cable temperature TS-1-3-PT4



for PT100, 4 conductors



Connetion cable temperature T-2-3-PT3

for PT100, 3-wire



Connection cable pressure PI-2-3



Connection cable pressure PI-2-3-HT

high-temperature design



Connection cable pressure, PN-1-3HT

high-temperature design



Connecting cable heating H/DAP-1-3



Connecting cable temperature T/DAP-1-3-1J

for single thermocouple FeCuNi type J



Connecting cable for tractive force F-1-3



Connecting cable for tractive force F-2-3



Connection cable pressure P-1-3



Connection cable pressure P-1-3-HT

high-temperature design



Connection cable pressure P-1-3-HT-W

high-temperature design, with elbow plug



Connection cable pressure P-1-3-W

with elbow plug connection



Connection cable pressure P-2-3-HT

high-temperature design



Connection cable pressure P-2-3



Connecting cable pressure P-2-3-S

plug on both sides PT06W-10-6S



Connection cable pressure P-1-3-EX

for DAIX Sensor



Connection cable pressure PI-1-3

for DAI design type 98



Connection cable pressure PI-1-3-HT

high-temperature design



Connection cable pressure PI-1-3-W

with elbow plug for DAI design type 98

**Архангельск** (8182)63-90-72  
**Астана** (7172)727-132  
**Астрахань** (8512)99-46-04  
**Барнаул** (3852)73-04-60  
**Белгород** (4722)40-23-64  
**Брянск** (4832)59-03-52  
**Владивосток** (423)249-28-31  
**Волгоград** (844)278-03-48  
**Вологда** (8172)26-41-59  
**Воронеж** (473)204-51-73  
**Екатеринбург** (343)384-55-89  
**Иваново** (4932)77-34-06

**Ижевск** (3412)26-03-58  
**Иркутск** (395)279-98-46  
**Казань** (843)206-01-48  
**Калининград** (4012)72-03-81  
**Калуга** (4842)92-23-67  
**Кемерово** (3842)65-04-62  
**Киров** (8332)68-02-04  
**Краснодар** (861)203-40-90  
**Красноярск** (391)204-63-61  
**Курск** (4712)77-13-04  
**Липецк** (4742)52-20-81

**Киргизия** (996)312-96-26-47

**Магнитогорск** (3519)55-03-13  
**Москва** (495)268-04-70  
**Мурманск** (8152)59-64-93  
**Набережные Челны** (8552)20-53-41  
**Нижний Новгород** (831)429-08-12  
**Новокузнецк** (3843)20-46-81  
**Новосибирск** (383)227-86-73  
**Омск** (3812)21-46-40  
**Орел** (4862)44-53-42  
**Оренбург** (3532)37-68-04  
**Пенза** (8412)22-31-16

**Россия** (495)268-04-70

**Пермь** (342)205-81-47  
**Ростов-на-Дону** (863)308-18-15  
**Рязань** (4912)46-61-64  
**Самара** (846)206-03-16  
**Санкт-Петербург** (812)309-46-40  
**Саратов** (845)249-38-78  
**Севастополь** (8692)22-31-93  
**Симферополь** (3652)67-13-56  
**Смоленск** (4812)29-41-54  
**Сочи** (862)225-72-31  
**Ставрополь** (8652)20-65-13

**Казахстан** (772)734-952-31

**Сургут** (3462)77-98-35  
**Тверь** (4822)63-31-35  
**Томск** (3822)98-41-53  
**Тула** (4872)74-02-29  
**Тюмень** (3452)66-21-18  
**Ульяновск** (8422)24-23-59  
**Уфа** (347)229-48-12  
**Хабаровск** (4212)92-98-04  
**Челябинск** (351)202-03-61  
**Череповец** (8202)49-02-64  
**Ярославль** (4852)69-52-93

[www.gneuss.nt-rt.ru](http://www.gneuss.nt-rt.ru) || [gsk@nt-rt.ru](mailto:gsk@nt-rt.ru)