

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Россия (495)268-04-70

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Казахстан (772)734-952-31

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

www.gneuss.nt-rt.ru || gsk@nt-rt.ru



Технические характеристики на усилители измерения температуры серии TMV 4



Contents:

1. General description
2. Technical details
3. Assembly
4. Electrical connection
5. Adjustment possibilities
6. Display and operating elements
7. Programme access / barring
8. Commissioning
9. Additional functions
10. Error reading

1. General description:

The Gneuß temperature measurement amplifier type TMV 4 is a measurement amplifier for thermocouples or PT 100 measurement resistors.

Universal setting possibilities guarantee that up to two freely selectable limit contacts and one analogue signal of 0-20 mA or 4-20 mA resp. 0-10 V can be processed. A peak hold function, simple operation via a touch-sensitive keypad and extreme sturdiness guarantee a high ease of operation. The unit can be protected against unauthorized use via possible software settings.

2. Technical data:

Front housing with an installation depth of 110 mm including terminal block with quick-lock function by means of plastic clamps, for wall thicknesses of up to 10 mm.

Colour:	dark grey
Dimensions:	96 mm x 48 mm = 1/8 DIN
Weight:	approx. 250 g
Panel cut-out size:	92,0 ^{+0,8} x 45,0 ^{+0,6}
IP rating:	Front IP 65, connection IP 00
Thermocouples:	L, J, T, K, S, R, B, N, E , NI-NiMo18%, W3, W5 (IEC 584), Rj >10MΩ
Resistance thermocouples:	Pt100 IEC751
Cold junction compensation:	by means of NTC
Output resistance Pt100:	Max. 20Ω
Output resistance thermocouples:	Max. 150Ω
Limit value relay:	Up to 2 over the overall measuring span freely adjustable relays Switching capacity: 250 VAC = 2A / 120 VAC = 4A
Fail-safe feature:	Performance control – sensor connections
Accuracy:	+/- 0,1 % of measuring value

Power supply: 100...230 VAC +/- 10 %, 50 - 60 Hz

Power consumption approx. 4 W

(optional: 24 VDC)

Display: 5-digit seven-segment LEDs, 15 mm high, luminous: green or red
when exceeding a preset alarm parameter, indicating range
-99999....99999, arithmetic overflow is indicated by 5 cross-ledgers

Measuring unit: °C / °F selectable

Connection of the instrument: On the reverse via a 36-pole terminal block

Ambient conditions:
(no condensation) Operating temperature 0-50 °C / humidity level 5....95 %

Analogue output: 0-20 mA or 4-20mA at current load 750 ohm/15V max.
0-10V at 500 ohm resistance at 0-20 mA set parameter

3. Assembly:

The instrument is designed for panel assembly. It is to be assembled in such a manner, as to protect it from humidity, dirt and vibration. The ambient temperature is not to exceed 50 °C.

4. Electrical connection:

The instrument is only to be connected and operated by qualified personnel. Please see attached diagram for wiring connections. The local regulations for operating electrical factory equipment are to be stringently adhered to.

CE-Mark



For unrestricted operation of the instrument according to the guidelines of the electromagnetic compatibility 89/336/EWG all analogue wiring needs to be shielded. The shield is to be one sided.

UL recommendation: 1) Use copper conductors designed for temperatures up to 60/70 °C
2) Minimum cross-section of 1 mm² to be utilized. (AWG 18)


Analogue output:

For an analogue output of 0-10 V, the pre-installed 500 ohm resistance is to be used with a set parameter of 0-20 mA. **For all other outputs, the pre-installed 500 ohm resistance has to be removed from terminals 19 / 20.**


Wiring configuration:

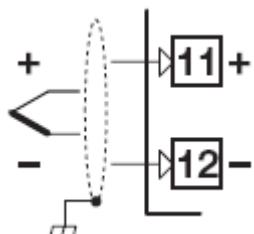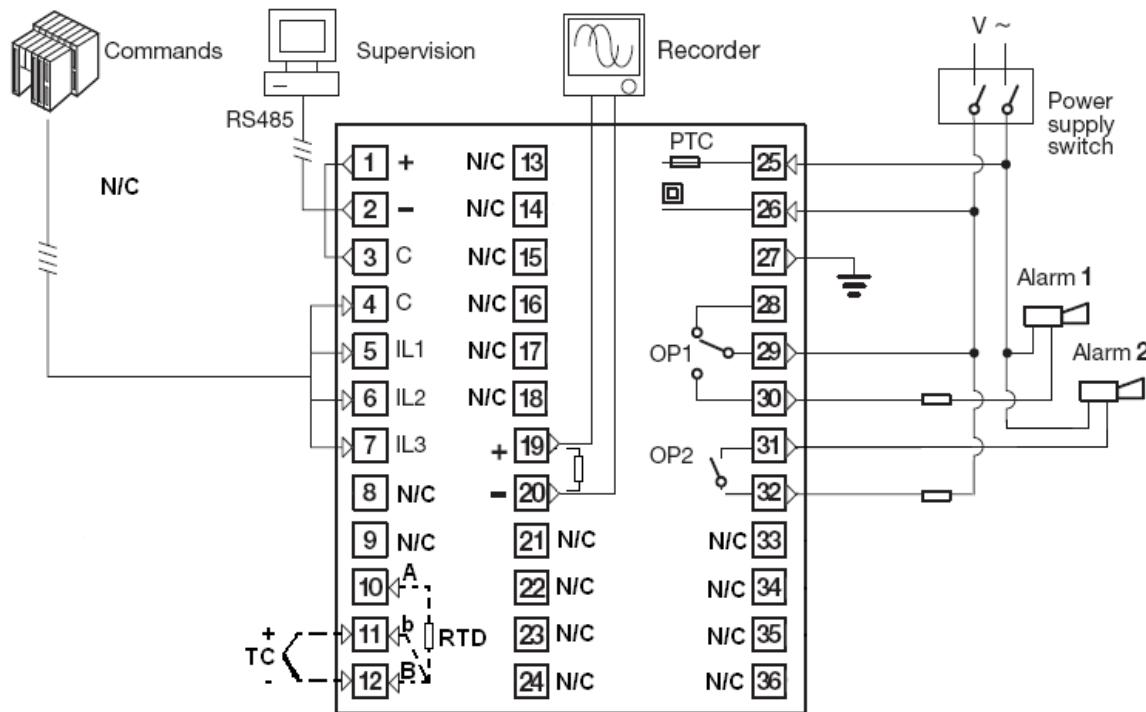


Output resistance max. 150 ohm

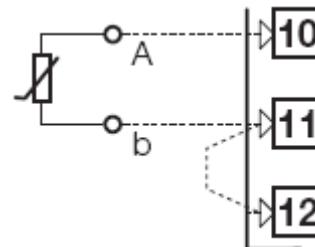

Output resistance max. 20 ohm

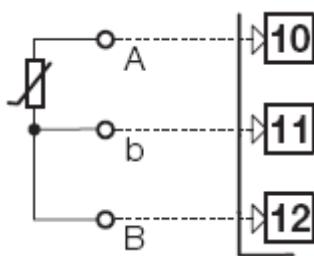


Output resistance max. 20 ohm

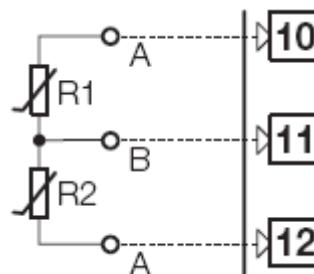

5. Adjustment possibilities:

5.1 Determination of configuration codes

Digits of configuration code 1

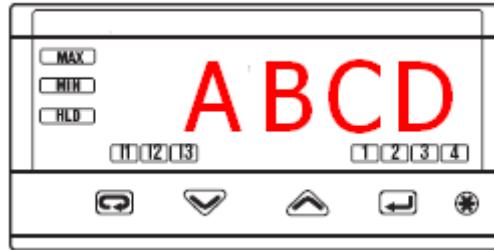


First configuration code (Con.1)						
Type	Range °C	Range °F	A	B	C	D
TR Pt100 IEC751	-99.9 - 300 °C	-99,9 - 572 °F	0	0		
TR Pt100 IEC751	-200 - 600 °C	-328 -1112 °F	0	1		
TC L Fe-Const DIN43710	0 - 600 °C	32 - 1112 °F	0	2		
TC J Cu45% Ni IEC584	0 - 600 °C	32 - 1112 °F	0	3		
TC T Cu-CuNi	-200 - 400 °C	-328 - 752 °F	0	4		
TC K Chromel-Alumel ICE584	0 - 1200 °C	32 -2192 °F	0	5		
TC S Pt10%Rh-Pt ICE584	0 -1600 °C	32 - 2912 °F	0	6		
TC R Pt13%Rh-Pt ICE584	0 -1600 °C	32 - 2912 °F	0	7		
TC B Pt30%Re Pt6%Rh IEC584	0 -1800 °C	32 - 3272 °F		0	8	
TC N Nichrosil-Nisil IEC584	0 -1200 °C	32 - 2192 °F	0	9		
TC E Ni10%Cr-CuNi ICE584	0 - 600 °C	32 - 1112 °F	1	0		
TC NI-NiMo18%	0 -1100 °C	32 -2012 °F	1	1		
TC W3%Re-W25%Re	0 -2000 °C	32 - 3632 °F	1	2		
TC W5%Re-W26%Re	0 -2000 °C	32 - 3632 °F	1	3		
Display mode						
Green						0
Red						1
Red, if alarm is active						2
Keep to max. values (function does not exist)						0

Example for configuration code 1:

- 03 – thermocouple type J
- 2 – in case of alarm, display colour changes to red
- 0 – (function does not exist)



Digits for configuration code 2

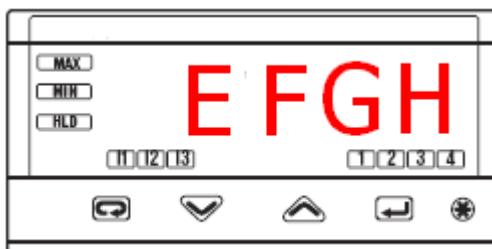

Second configuration code (Con.2)

Type of alarm and function	E	F	G	H
Alarm output	1	2	X	X
Not active	0	0	0	
Contact closed in case of sensor break	1	0	0	
Contact closed if limit value is exceeded	2	0	0	
Contact open if limit value is exceeded	3	0	0	


Example for configuration code 2:

- 1 – Limit value output 1 is active in case of sensor break
- 2 – If the limit value is exceeded, alarm output 2 is closed
- 00 – (Function does not exist)



5.2 Parameters

Main Menu	Parameter	Parameter Name	Default	Available Settings
PR55		Alarm Set		
(Optional)	AL.1SP	AL.1SP	AL1 alarm threshold	0 0....final value
(Optional)	AL.2SP	AL.2SP	AL2 alarm threshold	0 0....final value
(Optional)	AL.1hy	AL.1hy	AL1 alarm hysetresis	0,5 0.1...10.0
(Optional)	AL.2hy	AL.2hy	AL2 alarm hysetresis	0,5 0.1...10.0
AERAS		Setting of analogue output		
(Optional)	AO.Src	AO.Src	Analogue output source	none none/E/I nI
(Optional)	AO.tyP	AO.tyP	Analogue output type	0 - 20 0-20/4-20(mA)
(Optional)	AO.Lo	AO.Lo	Analogue output low range	0 -9999...32000
(Optional)	AO.Hi	AO.Hi	Analogue output high range	10000 -9999...32000
AL.Arri		Alarm functions		
	AL.1Lt	AL.1Lt	Reset by acknowledgement	none none/E/Ltch
	AL.2Lt	AL.2Lt	Reset by acknowledgement	none none/E/Ltch
Conf		Configuration menu		
Pass	PR55	Password entry (Code)	33	0..9999
Con.1	Con.1	1st part of configuration code (page 6)	9999	0...9999
Con.2	Con.2	2nd part of configuration code (page 7)	0	0...9999
IL1	IL1	Reset of AL1 by IL1	none	none/Ach1
IL2	IL2	Reset of AL1 by IL2	none	none/Ach2
Unit	Unit	Engineering unit	none	°C/°F
dP	dP	Number of decimals	0	0...1
FiLt	FiLt	IN 1 filter time constant	0	0...30s
in.1Sh	in.1Sh	Input Shift	0	+/- 0...60
(Optional)	Prot	Communication protokoll	Jbus	ibus/Jbus
(Optional)	baud	Baud rate	9600	1200/2400/4800/9600
(Optional)	Addr	Communication adress	1	1...247
s.Out	S.OUT	Signal output at failure	Lo	Hi / Lo
Code	Code	Password	33	0..9999

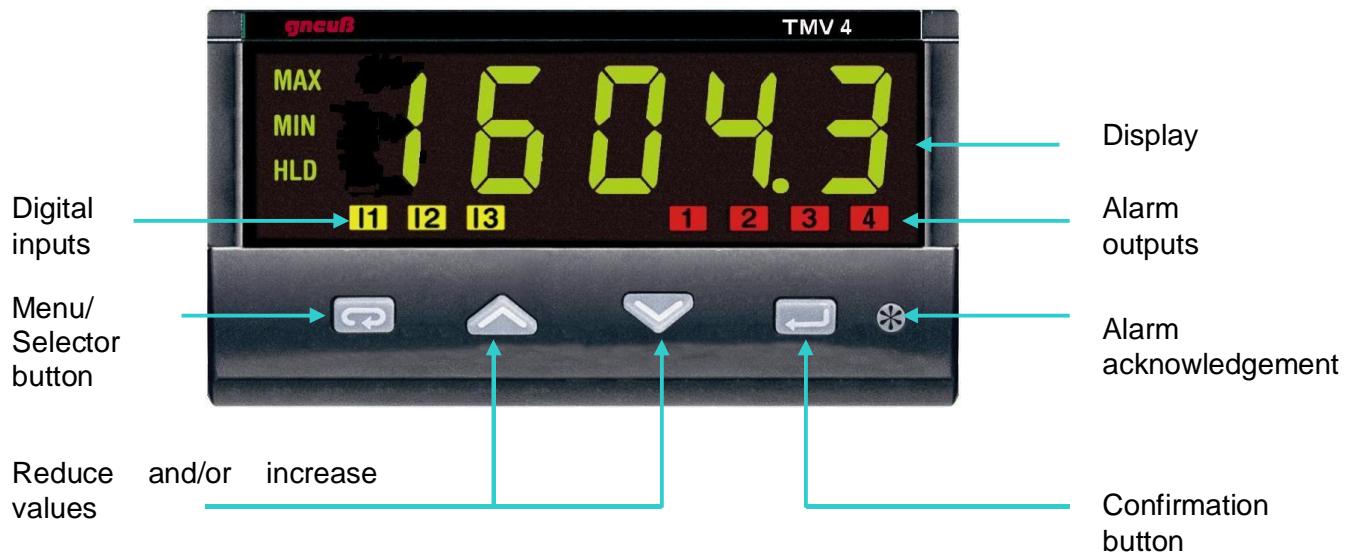6. Display and operating elements:**Button functions and combinations:**

- Selects between parameter levels and configuration level. By selecting within the parameter and configuration levels, either the operating mode is reached or sub-menus can be chosen.
- By activating in programme mode, the selected value is decreased.
By activating in operating mode, the MIN memory is evaluated and displayed.
- By activating in programme mode, the selected value is increased.
By activating in operating mode, the MAX memory is evaluated and displayed.
- By activating within the parameter levels or the configuration level, all sub-menus are switched over or the changed value is stored.
- By activation, the internal peak hold function MIN / MAX is deleted and updated or the alarm outputs are reset, if reset by acknowledgement is active.

7. Programme access / barring:

The TMV 4 allows all accessibility levels to be password protected (to be set in the configuration menu under parameter „*LocE*“ - see page 11).


8. Commissioning:

Listed below is a step-by-step breakdown for start-up and commissioning purposes.

1. Confirm no supply voltage.
 2. Connect TMV 4 according to wiring diagram (page 5).
 3. Connect supply voltage. After approx. 3 seconds the TMV 4 is ready for operation.
 4. During first commissioning, the unit immediately switches to configuration codes 1 and 2 (see tables page 6 and 7).

Adjustment levels (see also table on page8).

By repeatedly activating the button , the TMV 4 switches from operating mode to parameter mode (**RAL SPSP_7EAS_ALAr-1**) and to configuration mode (**Conf**). On pushing  again, the instrument is set back to operating mode.

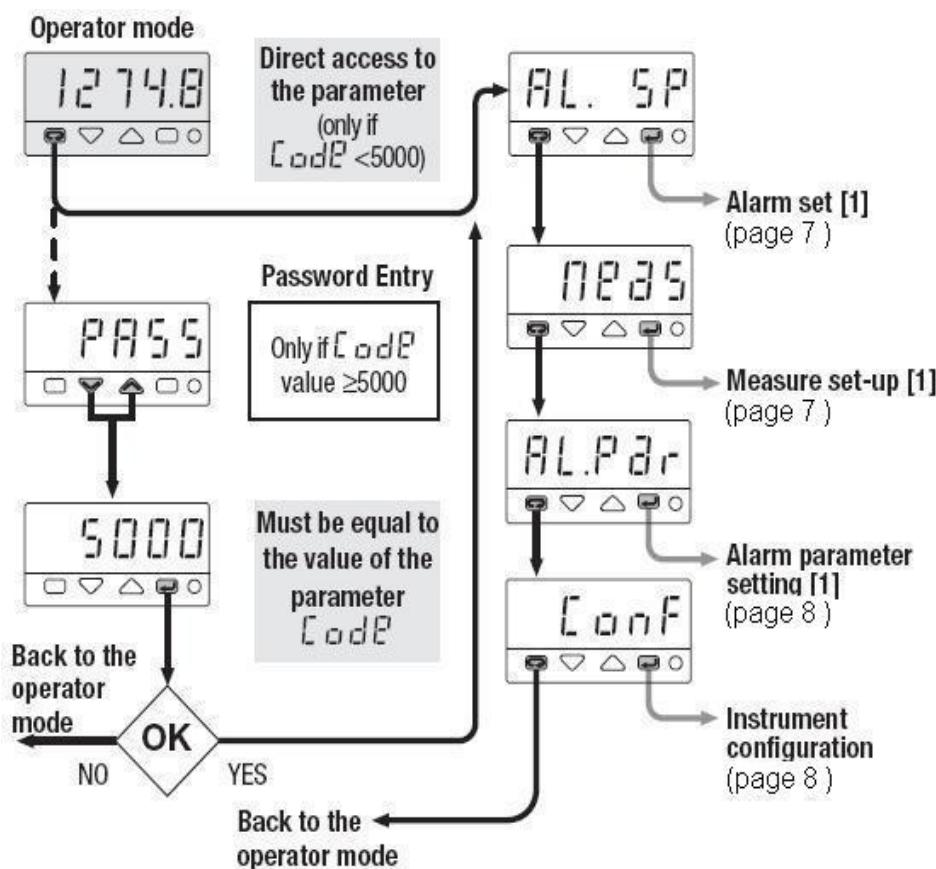

To access all levels, a password has to be entered after pushing  (only if this is larger than 5000). This is done by holding down the   buttons and the instrument automatically selects ones, tens, hundreds and thousands and selectable increases or decreases.

If the right password is entered, the selected level is reached by pushing

Settings of alarm outputs:

Parameter explanation

ALARM SET



: Setting of alarm setpoint for alarm 1,
e.g. 200 (°C)


: Setting of alarm setpoint for alarm 2.
e.g. 280 (°C)

: Setting the hysteresis for alarm setpoint (alarm 1)
in %, e.g. 10 (%) of a thermocouple type J
(600 °C) = 6°C

: Setting the hysteresis for alarm setpoint (alarm 2)
in %, e.g. 10 (%) of a thermocouple type J
(600 °C) = 6 °C

Settings of the analogue output:

PARAMETERISATION - MEASURE MENU

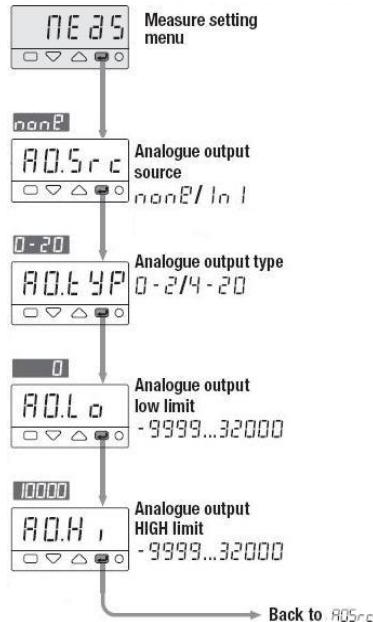

: Input signal for analogue output


: Possible settings of analogue output signal
between 0 – 20mA (0-10V) or 4 – 20mA

: Setting of minimum analogue output value

: Setting of maximum analogue output value

Alarm functions:


ALARMS PARAMETER MENU

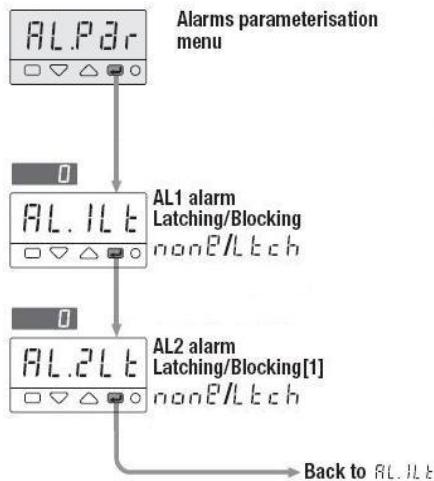

: Activate latching/blocking for alarm 1. Reset by pushing the asterisk (*) key.

: Activate latching/blocking for alarm 2. Reset by pushing the asterisk (*)key.

Configuration menu:

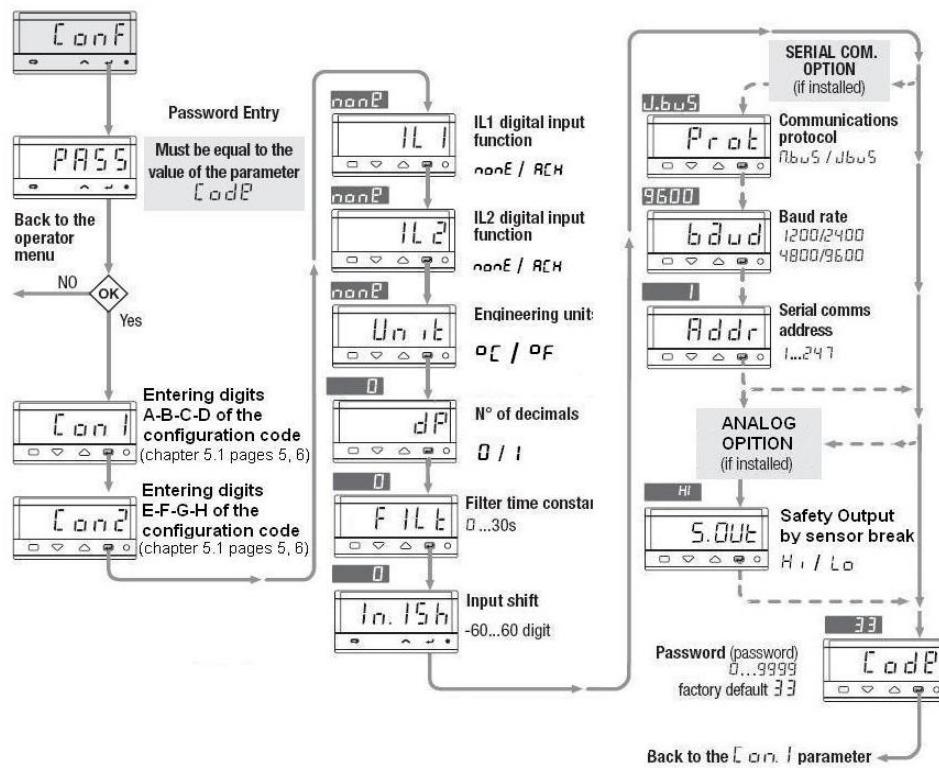

Explanation of the configuration menu parameters

ConF => PASS	: Entering the password for access to the relevant level
=> Con_1	: First configuration code see page 5
=> Con_2	: Second configuration code see page 6
□□=> I L 1	: Reset of alarm 1 via input 1 (terminal 5)
=> I L 2	: Reset of alarm 2 via input 1 (terminal 6)
=> Un_it	: Selection of engineering units between °C or °F
=> dP	: Adjustment of the decimal indication, e.g. 0 = 1234 or 1 = 123.4.
=> Fl Lt	: Response time (seconds) to react to a value adjustment
=> in_15h	: Value by which the display is changed, e.g. if entering 5 and a temperature value of 100 (°C), the display shows a value of 105 (°C).
=> Prot	: Selection between Modbus and Jbus for communication records
=> bAUd	: Adjustment of the baud rate for communication, e.g. 9600 = 9600 Baud
=> Addr	: Adjustment of the communication address 1 ... 247
=> S_OUT	: Switching behaviour of the alarm relay contacts of the analogue output in case of sensor break – see sensor break monitoring
=> CodE	: Adjustment of password: With a value of ≥ 5000, a password has to be entered before access is given to any of the parameter levels. If the value is below 5000, a password has to be entered only in the configuration level (password adjusted by Gneuß = 33)

Sensor-break monitoring:

The TMV 4 is equipped with a sensor-break monitoring for the temperature sensor in use.

If one of these cables is disconnected and/or the temperature sensor is not connected, a sensor break is displayed by „“.


The analogue output reacts in accordance with the set parameter of S.Out as follows:

- Hi = In case of sensor break, the analogue output gives a signal of > 21 mA.
Lo = In case of sensor break, the analogue output gives a signal of 0 mA.

In case of sensor break, the alarm outputs react in accordance with the set parameter of configuration code 2 (see page 6) as follows:

Con2 = 2200 and S.Out = Lo	In case of sensor break, the relays are open.
Con2 = 2200 and S.Out = Hi	In case of sensor break, the relays are closed.
Con2 = 3300 and S.Out = Lo	In case of sensor break, the relays are closed.
Con2 = 3300 and S.Out = Hi	In case of sensor break, the relays are open.

9. Additional functions:

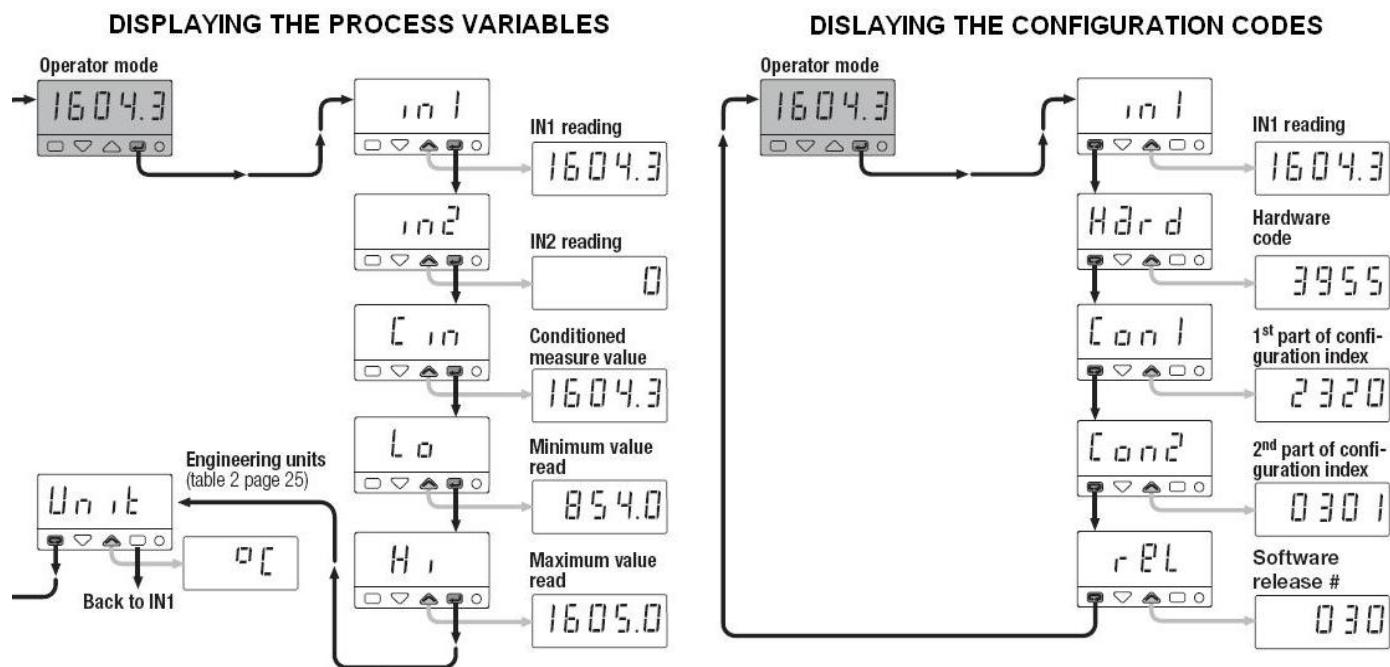

Peak hold:

During normal operation of the TMV 4, the internal peak hold can be evaluated and deleted. The highest and lowest point of the temperature range ever reached is registered. This function allows temperature spikes to be registered. Every time the unit is switched on again, this measurement is re-activated.

Push : The minimum temperature value is displayed for five seconds.

Push : The maximum temperature value is displayed for five seconds.

Push : All values are deleted and reset to the current actual value. Measurement resumes until next point of deletion or until the unit is switched on and off again.

Display of measuring values:

During normal operation of the instrument, it is possible to allow the measuring value to be displayed in time intervals. By pushing  twice, the following displays and settings are possible:

R IL-U = Deactivate / activate the interval display of the measuring unit during operation (YES / no  )

10. Error reading:

Display:	Reason:	Error elimination:
	Sensor break Check/replace connecting cables	Replace temperature sensor
	Overflow	Value too large to be displayed or configuration code 2 does not correspond to the connected temperature sensor.
	Overflow	Value too small to be displayed or configuration code 2 does not correspond to the connected temperature sensor.

Архангельск (8182)63-90-72
Астана (7172)727-132
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06

Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Киргизия (996)312-96-26-47

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Россия (495)268-04-70

Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Казахстан (772)734-952-31

Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

www.gneuss.nt-rt.ru || gsk@nt-rt.ru